

IPAD KIOSK VIDEO PLAYER

Cineloooper

The silent force behind every kiosk: one tap and your video plays in loop, locked and on schedule.



CONTENTS

What's in this guide?

01	Getting started Playing your first video	4
02	Playlist Managing multiple videos	8
03	Kiosk-mode Locking the screen	12
04	Text overlay Text over your video	16
05	Logo overlay Your logo on screen	20
06	Playback schedule Automatic start and stop	22
07	Settings Password, timing and transitions	24
08	Pro overview All features at a glance	26

CHAPTER 01

01


Getting started

Welcome to CineLooper. This guide explains step by step how to use the app — from your first video to a fully locked kiosk setup.

01

CHAPTER

Getting started

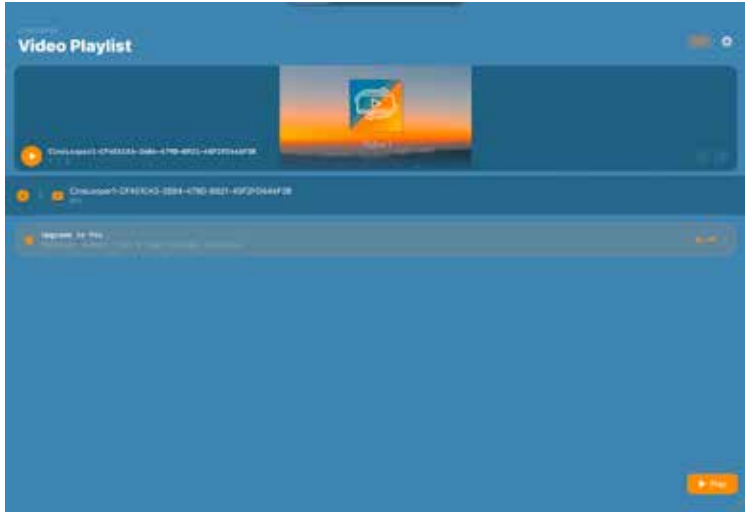

1.1 Adding a video

- 1 Open CineLooper on your iPad
You see the main screen with the Video Playlist.
- 2 Tap + Add videos
The button is in the bottom-left of the screen.
- 3 Choose a video
The iPad Files app opens. Navigate to your video and tap it.
Video appears in the list
- 4 You see the video appear in the playlist with a preview.

GETTING STARTED · CONTINUED

1.2 Playing a video

- Tap the Play button in the bottom right.
- The video plays fullscreen in a loop immediately.
- Tap the X icon in the bottom right to go back (free version only).

1.3 Viewing a preview

Above the playlist you see a preview window. Here's how it works:

- Tap a video in the list @ the preview loads immediately.
- Tap the play button in the preview window to play the video.
- Use the arrows on the right to browse through the list.

TIP

In the free version you can add and play one video. Upgrade to Pro for multiple videos and more features.

CHAPTER 02

02

Playlist

With CineLooper Pro you can create a playlist with multiple videos that play one after another.

02

CHAPTER

Playlist



2.1 Adding videos

- Tap + Add videos.
- You can select multiple videos at once by tapping them all.
- Tap Open — they all appear in the list.

2.2 Enabling and disabling videos

Each video in the list has an orange tick on the left. This lets you choose which videos are played:

- Orange tick = on — video is included in the loop.
- Empty circle = off — video is skipped.

PLAYLIST • CONTINUED

2.3 Adjusting the order

You can adjust the order of videos in two ways:

- Arrows  to the right of each video — tap to move one position up or down.
- Drag — hold a video and drag it to the desired position.

2.4 Removing a video

- Swipe the video to the left in the list — tap the red Remove button.

NOTE

Removing from the playlist does not delete the video from your iPad.

TIP

This way you can quickly switch between different combinations without removing videos.

CHAPTER 03

03


Kiosk-mode

Kiosk mode locks the screen so nobody can leave the app. Ideal for exhibitions, waiting rooms and events.

03

CHAPTER

Kiosk-mode

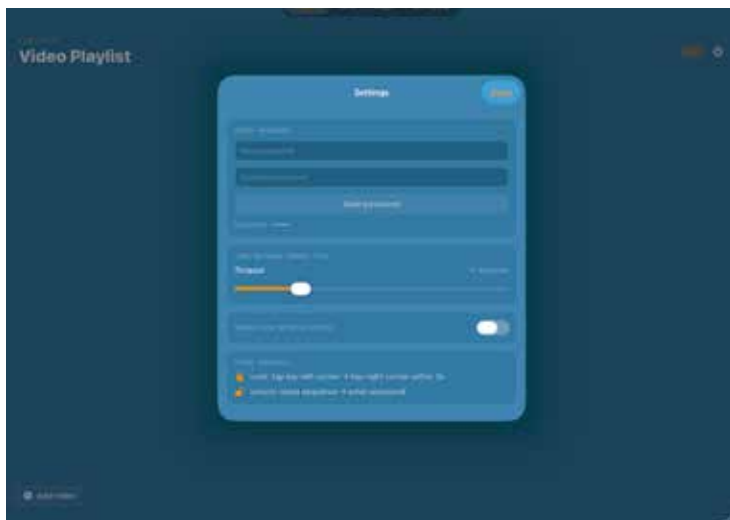

3.1 Setting a password

NOTE

Set your password BEFORE activating kiosk mode. Default password is 1234.

Open settings

Tap the gear icon in the top right.

Go to Kiosk password

Open the password panel.

Type your password

Enter the new password twice.

Save

Tap Save password.

3.2 Activating kiosk mode

Kiosk mode activates automatically when you tap Play. The screen is then immediately locked. You can also activate the lock manually using the corner sequence:

Tap top-left corner

Tap in the top-left corner of the screen.

Tap top-right corner

Tap the top-right corner within 3 seconds (adjustable).

Screen locked

A small padlock appears in the top right — the app is now locked.

3.3 Deactivating kiosk mode

- Perform the same corner sequence: top-left ® top-right.
- The password screen appears.
- Type your password and tap Unlock.
- The app returns to the main screen.

3.4 Setting the timeout

Via the gear icon you can set how much time there is between the two corner taps. Default is 3 seconds. You can set this to 1 to 10 seconds.

CHAPTER 04

04


Text overlay

With the text overlay you can display text over your video — for example an event name, slogan or welcome message.

04

CHAPTER

Text overlay

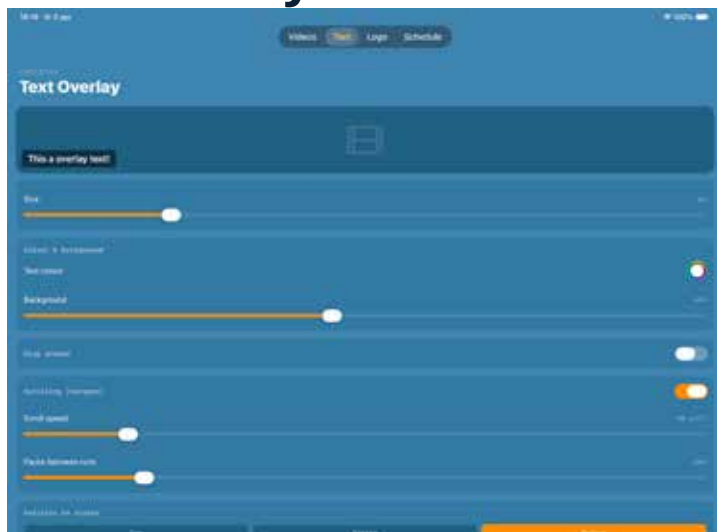

4.1 Setting up text

- Tap the Text tab at the bottom of the screen.
- Switch on Text overlay enable.
- Type your text in the text field.
- You immediately see a preview at the top of the screen.

4.2 Customising the appearance

Font

Choose from 16 fonts — tap the field for the selection list.

Size

Slider from 14 to 120 pt.

Text colour

Tap the colour swatch for the colour picker.

TEKST OVERLAY · CONTINUED

Background

Opacity of the background behind the text (0% = none).

Drop shadow

On/off switch — choose colour and radius.

4.3 Position

Choose where the text appears on screen:

- Top — text is at the top.
- Centre — text is in the middle.
- Bottom — text is at the bottom (default).

4.4 Scrolling text (marquee)

- Switch on Scrolling (marquee).
- Scroll speed — set how fast the text moves (20–300 px/s).
- Pause between runs — how many seconds to pause after each scroll (0 = immediately repeat).

TIP

Scrolling text is ideal for long texts such as a programme or welcome message.

CHAPTER 05

05


Logo overlay

Add your own logo to the screen. The logo is displayed over the video in the position you choose.

05

CHAPTER

Logo overlay

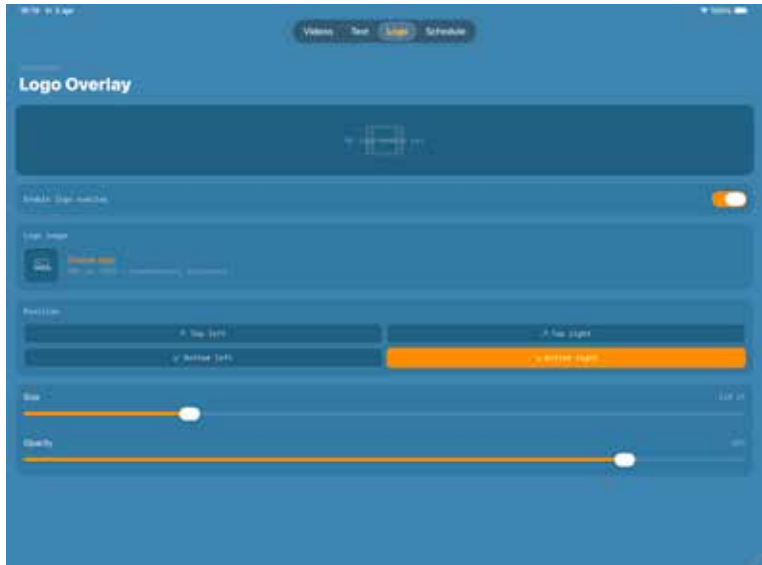

5.1 Setting up a logo

- Tap the Logo tab at the bottom of the screen.
- Switch on Logo overlay enable.
- Tap Choose logo.
- Select an image from your iPad (PNG or JPEG).

LOGO OVERLAY • CONTINUED

5.2 Customising the logo

Position

Choose one of the four corners: top left, top right, bottom left, bottom right.

Size

Slider from 40 to 400 pt.

Opacity

How transparent the logo is (5% to 100%).

T I P

Use a PNG with a transparent background for the best result.

CHAPTER 06

06


Playback schedule

With the playback schedule you can set on which days and times the video plays. Outside the schedule the app waits and starts automatically at the right moment.

06

CHAPTER

Playback schedule

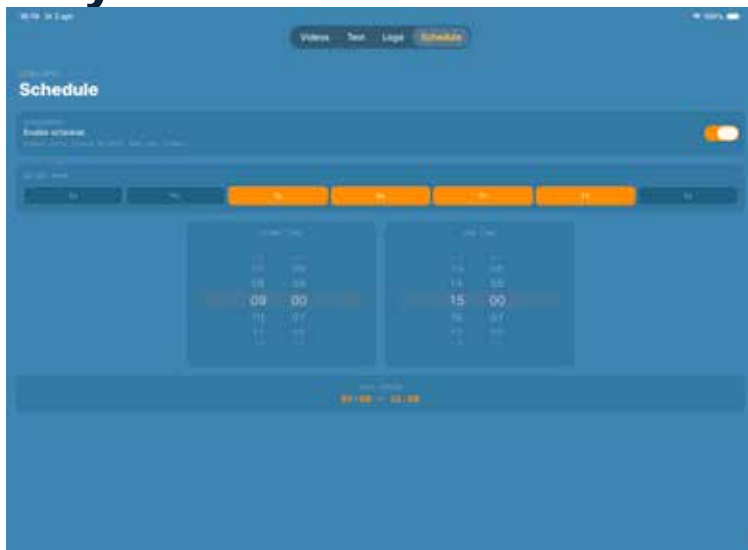

6.1 Setting up a schedule

Open the Schedule tab

Tap Schedule at the bottom of the screen.

Enable schedule

Switch on Enable schedule.

Choose days

Tap a day to switch it on or off.

Set start time

Use the time wheel.

Set end time

Use the time wheel — the period shows as PLAYBACK PERIOD.

PLAYBACK SCHEDULE • CONTINUED

6.2 How it works

- Within the schedule: video plays normally.
- Outside the schedule: screen shows a waiting screen with the next start time.
- The app checks every 30 seconds whether the schedule is active.

T I P

Handy for shops, canteens or events — the video starts and stops automatically.

CHAPTER 07

07


Settings

Tap the gear icon in the top right of the Videos tab for the settings.

07

CHAPTER

Settings

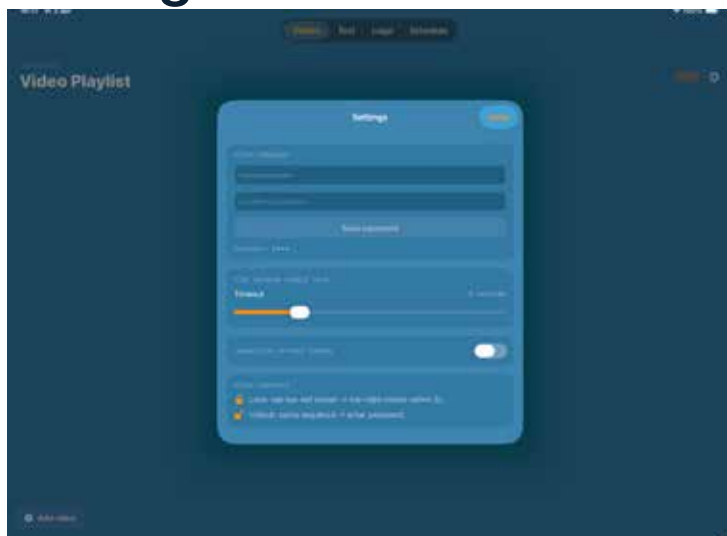

7.1 Available settings

Kiosk password

Set a new password for kiosk mode.

Corner tap timeout

Time between left and right corner tap (1–10 seconds).

Black screen between clips

Short pause with black screen between each video (0.5–10 sec).

CHAPTER 08

08

Pro - overview

A complete overview of everything CineLooper can do.
Pro is a one-time in-app purchase.

08

CHAPTER

Pro - overview

Free version

Play video

Load one video and play it in an endless loop.

Video formats

MP4, MOV, M4V and all iOS-supported formats.

Preview

View video before playing.

CineLooper Pro

Playlist

Add and manage multiple videos.

Order

Move videos up/down or drag them.

Selection

Choose per video whether it is played.

Kiosk mode

Fully lock the screen with a password.

Corner sequence

Activate/deactivate via top-left + top-right corner.

Password

Adjustable password for kiosk mode.

Black transition

Adjustable black pause between videos.

Text overlay

Display text over the video.

Fonts

Choose from 16 fonts.

Text formatting

PRO _ OVERVIEW · VERVOLG

Size, colour, background, drop shadow.

Text position

Top, centre or bottom.

Scrolling text

Marquee effect with adjustable speed and pause.

Logo overlay

Place your own logo over the video.

Logo position

Choose from all four corners.

Logo customisation

Size and opacity adjustable.

Playback schedule

Automatically start and stop at set times.

Schedule days

Enable or disable per day of the week.

Save playlist

Playlist and settings are saved after closing.

A V A I L A B L E I N

Nederlands

NL

English

EN

Deutsch

DE

Français

FR

Italiano

IT

Español

ES

Questions or feedback? Email info@landschap.nl